



**EUKOR**

We deliver

# Guidelines for Product Measurement

Measuring your product correctly and providing the right dimensions can save you both money and time. Read more on guidelines for product measurement.

## Measurement principles

The amount of space to safely stow your product is determined by multiplying its overall length by its overall width by its overall height. Measures shall include attached external items such as side mirrors, exhaust stacks, reefer and/or air-conditioning units, trailer tongues, boat swim platforms, out-drives, etc.

Measurement processes put in place and the tools used by EUKOR are according to a global standard to ensure consistency for our customers across all ports.

## Why are correct product dimensions important?

Measuring your product correctly is important for you and us. Providing us with the right dimensions ensures you:

- adequate space for your product inside the vessel
- correct calculation of freight
- correct handling equipment for breakbulk products
- reduced risk of damage
- shipment on booked vessel

## What products need specific and correct dimension information?

Virtually every type of product need correct dimension information for booking, including, but not limited to breakbulk, new and used rolling equipment, trucks, buses, boats, newly manufactured auto with modifications and/or exterior accessories, and privately owned vehicles that are over 20 years old.

## Measurement Process

When placing your booking, you need to provide the dimensions of your product(s) according to the measurement guidelines described.


When your product arrives at port of load, EUKOR will do a measurement of your product to verify the booking dimensions versus actual dimensions.

In the event of a discrepancy between dimensions specified at the time of booking and the measurements taken at the port of load, you will be contacted by one of our commercial agents.

If you are dissatisfied with the finding, you can request a joint measurement session.

### How to measure correctly

Measure your product by multiplying its overall length by its overall width by its overall height. Measures shall include attached external items. It is recommended that added parts which can easily be dismantled such as antennas, mirrors, exhaust stacks, etc., are removed or pulled in if possible before delivery.

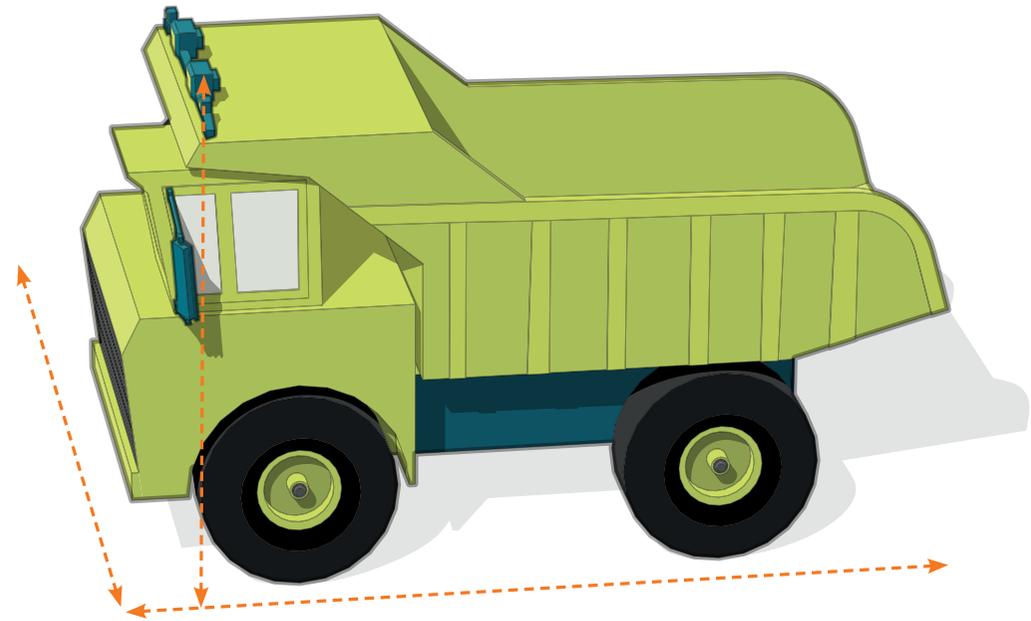

### Shipping on EUKOR equipment

When shipped on EUKOR handling equipment, only the product itself shall be included in the dimensions provided.



### Shipping on your own equipment

When shipped on your own equipment, like trailer or cradle, the carrying equipment shall be included in the dimensions provided.

